

Press Top PCB Button for Setup

SETUP

SETUP Shows Momentarily

1<sup>st</sup> Step: Price / Play Save with View

Use Up / Dn Button To Change

Press Setup Again To Advance.



CP 0 1.00

2<sup>nd</sup> Step: Bonus Price First Level.

Up / Dn To Change Save with View

bon 1C 05

3<sup>rd</sup> Step: Bonus Price Second Level.

Up / Dn To Change Save with View

bon 2C 10

4<sup>th</sup> Step: Bonus Received First Level

Up / Dn To Change Save with View

bon 1P 0 1

5<sup>th</sup> Step: Bonus Received Second Level

Up / Dn To Change

bon 2P 02

7<sup>th</sup> Step: Clock Hours Minutes

Up for Hours Dn for Minutes

CLH 0 1.13

8<sup>th</sup> Step: Date Month Day

Up for Month Dn for Days

date.02.15

Save any Setup with View Button:

9<sup>th</sup> Step: Year Day of Week

Up for Year Dn for Day Sunday =1

Yrd 23. 7

10<sup>th</sup> Step: Happy Hour Cost

Up for Dollars Dn for Cents .25c

HHC 00.00

11<sup>th</sup> Step: Happy Hour Start Time

Up for Hour Dn for Minutes

HHS 00.00

12<sup>th</sup> Step: Happy Hour Run Length

Up for Hours Dn for Minutes

HHL 00.00

Last<sup>th</sup> Step: Happy Hour Days On


Up Select Day of Week = 8 8

Sun Mon Tue Wed Thur Fri Sat

Dn Turns DOT On/Off Dot Lit ON

S.n.f.u.f.f.s.

EXIT SETUP

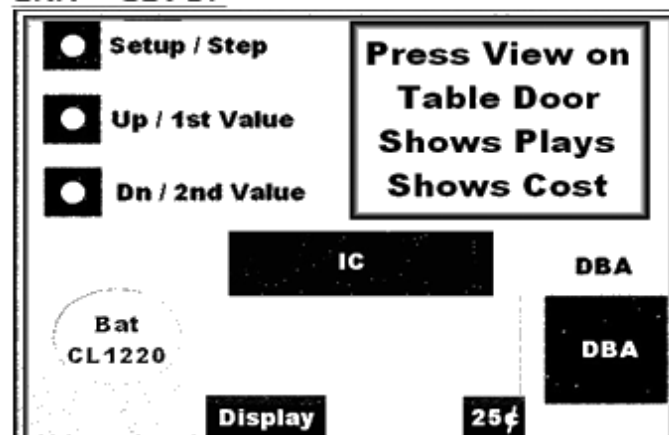

Hold View Button Read Battery Volts

Press Dn Button Display Elect Meter

Holding Setup 3 Seconds Exits Setup

Setup will Exit if not used in 1 Minute

Hold Setup Press Down Default Setting